 


# Radiant Heater WDH-240GT

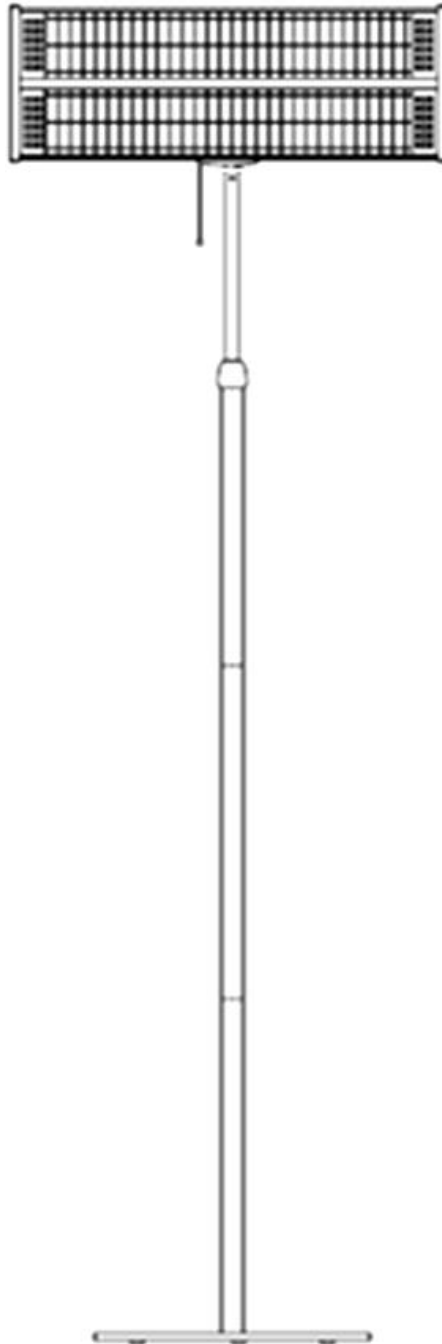

Dear Customer,

You have chosen a high-quality product. To ensure that you get a lot of enjoyment from this product, here are a few more tips:

 
**In case of any problems:**

We hope that the unit meets your expectations! If, despite the greatest possible care, there should ever be cause for complaint, please contact us briefly, as we are very concerned about your satisfaction and would like to clear up any misunderstanding.

## **Important safety instructions:**

- Please note that the radiant heater can become very hot during operation, so keep a sufficient distance at all times. Especially away from flammable or easily combustible objects!
- Do not place/mount the radiant heater directly next to a power socket !
- Never use the radiant heater on moving surfaces, objects or vehicles ! There is a risk that the radiant heater may tip over.
- It is recommended to use a separate power source (socket) to supply the radiant heater. (Please do not use multiple sockets for operating the radiant heater).  
Furthermore, please ensure that the power cable is always laid with sufficient distance to the heat source.
- Supervise the radiant heater when children are near the appliance !
- Watch out for electricity, never walk into or insert objects into the appliance !
- Do not place any objects on or directly in front of the radiant heater !
- Please ensure sufficient space/clearance around the unit !
- Only qualified personnel or electricians are allowed to open the unit !
- Make sure that no moisture gets into the unit !
- The radiant heater must not be used in the direct vicinity of bathtubs, washbasins or swimming pools !
- Only use the recommended voltage for operating the unit !
- Make sure that the power cable is unfolded (untied) before connecting it to the socket !
- Make sure that the plug is cleanly and properly connected to the socket before using the appliance !
- Never reach near the plug or socket with wet hands !
- Do not repair defective or damaged cables on the unit yourself, you could get a severe electric shock !
- Make sure that highly flammable substances (e.g. gases/oils etc.) are never in the vicinity of the unit !
- Ensure that the area on and around the unit remains free of dust, cobwebs and similar dirt at all times to prevent accidental ignition (fire) !
- If the connecting cable of this appliance is damaged, it must be replaced by the manufacturer or its after-sales service or a similarly qualified person in order to avoid hazards.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you are not going to use the unit for a long time, switch it off and disconnect the mains plug !


- Please always keep a sufficient distance to walls, ceilings, floors and objects. Depending on the material, we recommend a minimum distance to the front of at least 150 cm and to the side or upwards of at least 0.5 metres! The installation height should be at least 180 cm.

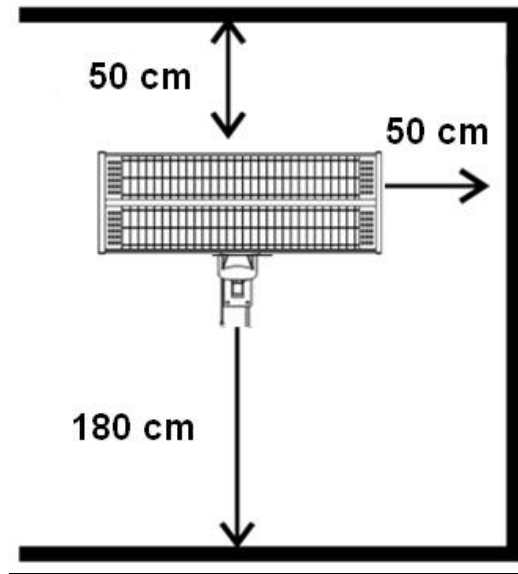


Please switch off the unit immediately and disconnect it from the power supply if something seems to be wrong! In this case, please contact a specialist and do not try to repair the unit yourself!

**Example:** House fuse has blown out during operation of the radiant heater.

## Description of the unit parts:

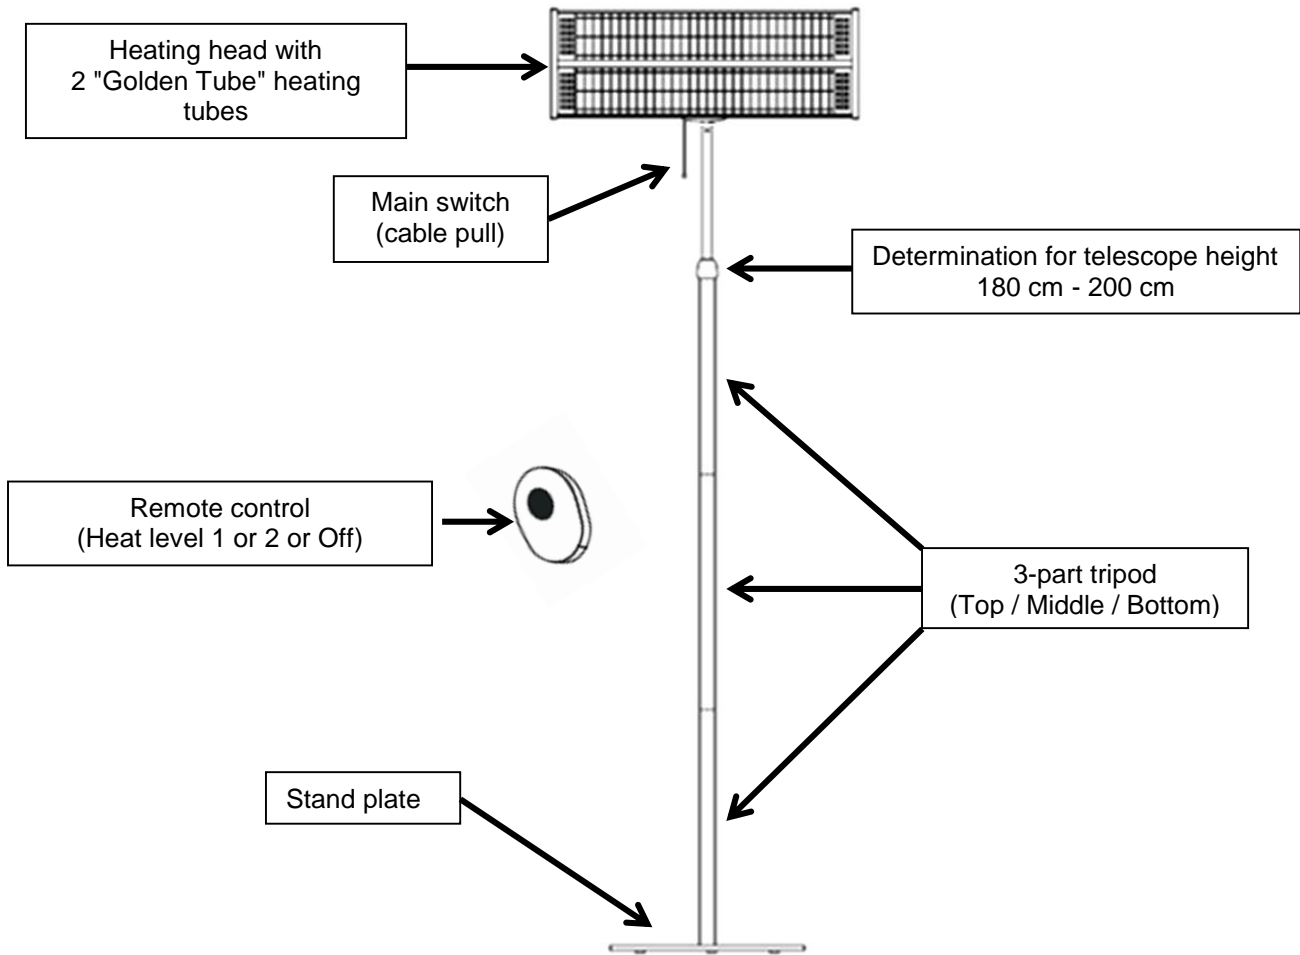 


## Detailed view of the heating head:

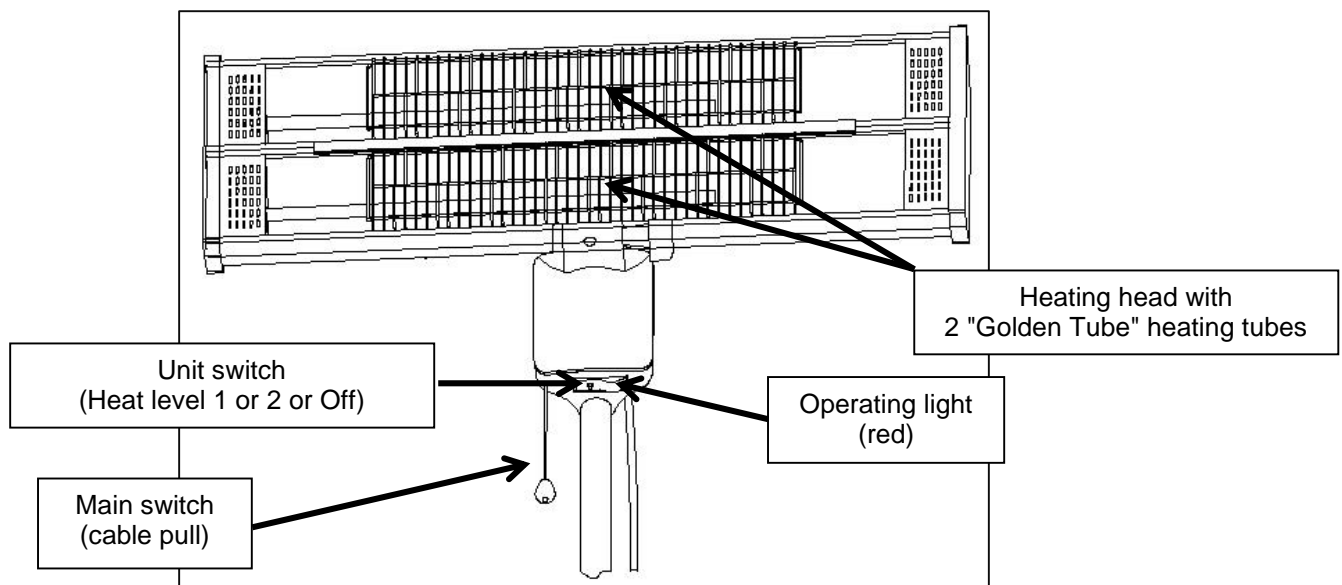 

## Assembly instructions:

### 1. Attachment to the tripod

 - 1.1. Take the round base plate out of the packaging and place the side with the protective felt on the floor.

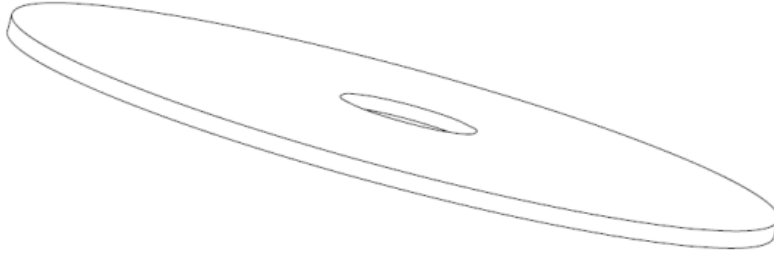


- 1.2. Next you need to connect (screw) the three (3) parts of the tripod together. Make sure that the telescope height lock is at the top.

Note: The three parts of the tripod cannot be screwed together in any order. There are short and long threads. The short thread belongs/ fits in the base plate !




 - 1.3. Then screw it to the central thread of the base plate.

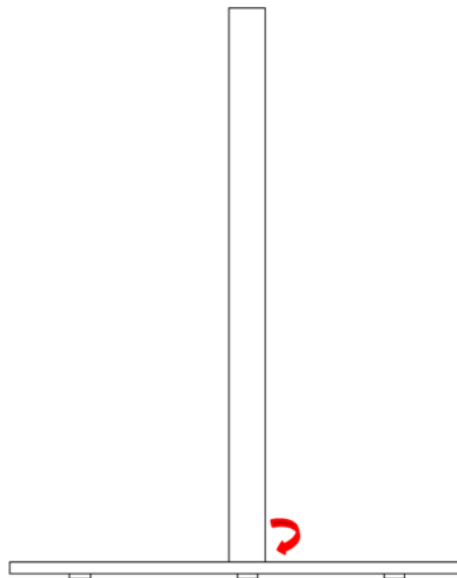

- 1.4. After you have securely screwed the stand to the base plate, you can now insert the heating head into the telescopic holder from above. Make sure that the opening hole for the locking Allen screw is (becomes) visible through the counter opening of the heating head ! Now tighten (close) the lock for the telescope height.

 - 1.5. Finally, you must secure the heating head with the supplied Allen screw (M6X10):

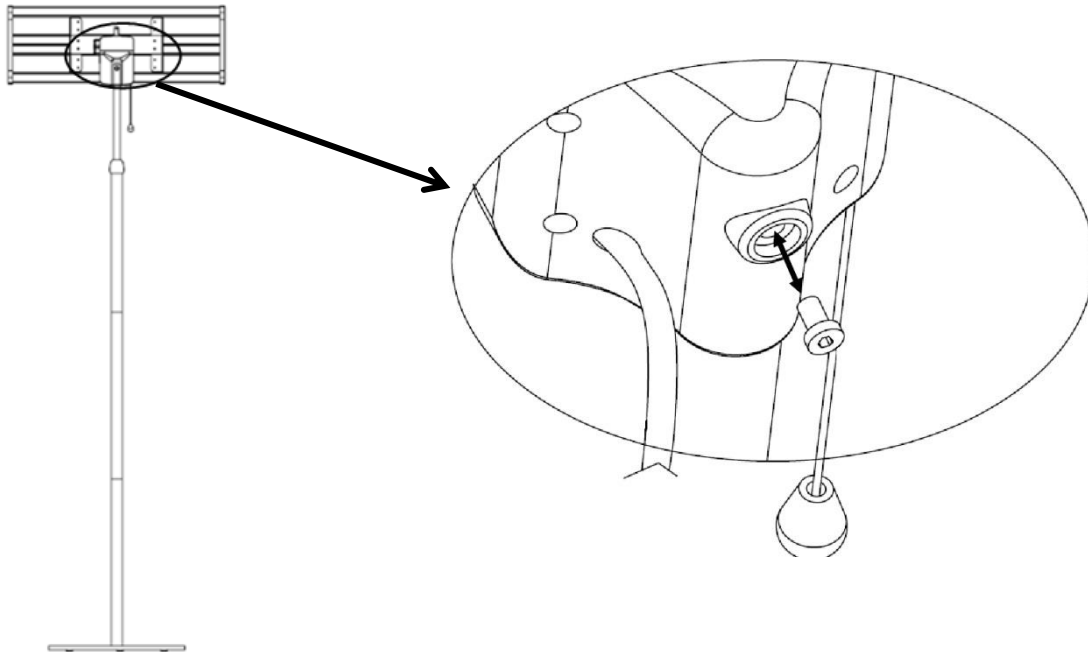

- 1.6. Always make sure that the heating head is in a horizontal position at all times before putting the unit into operation !

## **Instructions for use:**

### **2. Commissioning**

- 2.1. Insert the mains plug properly into the socket.
- 2.2. Switch the unit on by pulling the main switch (pull cord). The unit then signals that it is ready for operation by the red operating light lighting up.
- 2.3. The unit switch is located next to the red operating light. You can use this to switch the operation in the following sequence (circuit):
- Level 1 (1,200 Watt heating power)
  - Level 2 (2,400 Watt heating power)
  - From

The supplied remote control also functions according to the one-button switching in the order listed above !  
The remote control requires two AAA (micro) batteries (not included) !

### 3. Cleaning & Storage

Always unplug the heater from the mains and allow it to cool down completely before cleaning it!

#### 3.1 Cleaning the housing and the parabolic reflector:

 
- Use a soft and damp cloth to clean the outside of the housing.
- Only use mild cleaning agents to clean your radiant heater.
- Also, make sure that no aggressive cleaning agents are used, as these can damage your appliance !
- Please make sure that no water gets inside your radiant heater at any time !

#### 3.2 Storage:

- We recommend that you repack the unit in its original box for storage.
- Store the radiant heater in a dry and sufficiently ventilated place/space.

### 4. Other important operating instructions

- 4.1. Do not disconnect the mains plug by pulling on the power cable !
- 4.2. Do not use insect repellent, oil spray, paint spray, etc. near the heater. This may cause damage to the unit or even fire !
- 4.3. Do not place the appliance on sloping or uneven ground !
- 4.4. Make sure that the mains cable never runs in front of the radiant heater or that the mains cable is not wrapped around the heating element.
- 4.5. Do not operate the radiant heater with a timer or similar control. This may result in damage to the appliance or even fire.
- 4.6. Although the radiant heater is protected against splashing water (IP55), do not use it in rain showers and/or other wet conditions !
- 4.7. Always keep the reflector behind the heating tube clean or dust-free. Otherwise, this can lead to a loss of power of the radiant heater!
- 4.8. When starting the heating operation, dark spots may appear on the heating tube for a short time. This is normal and does not represent a malfunction or impairment of the heating performance.

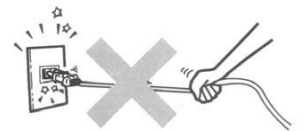

### Technical data

<b>Model name:</b>	WDH-240GT
<b>Voltage:</b>	220V - 240V / 50Hz
<b>Max. Power consumption:</b>	2.400 W
<b>Height complete with stand:</b>	2,100 mm - 2,300 mm (adjustable)
<b>Width and depth complete with stand (W/D)</b>	700 x 460 mm
<b>Dimensions of the heating head (H/W/D):</b>	250 x 700 x 230 mm
<b>Waterproofness:</b>	IP55
<b>Weight:</b>	16 .5 kg (incl. tripod) / 3.7 kg (heating head only)

There may be deviations in the technical data!

## Other

### Warranty statement:

Notwithstanding the statutory warranty claims, the manufacturer grants a warranty in accordance with the laws of your country, but at least 1 year (in Germany 2 years for private individuals). The warranty begins on the date of sale of the appliance to the end user.

The guarantee only covers defects that are due to material or manufacturing faults.

Warranty repairs may only be carried out by an authorised customer service. To make a warranty claim, please enclose the original sales receipt (with date of sale).

Excluded from the guarantee are:

- Normal wear
- Improper applications, such as overloading the appliance or non-approved accessories.
- Damage due to external influences, use of force or foreign objects
- Damage caused by non-observance of the operating instructions, e.g. connection to an incorrect mains voltage or non-observance of the assembly instructions.
- Completely or partially dismantled units

### Conformity:

The radiant heater has been tested and itself and/or parts thereof have been manufactured under the following (safety) standards:

**Tested by Dekra "GS" and of course with CE (LVD + EMC) conformity.**

Tested safety according to: EN 60335-1:2012+A11:2014+A13:2017  
EN 60335-2-30:2009+A11:2012  
EN 62233:2008  
AfPS GS 2014:01 PAH

CE (LVD) Conformity tested according to: EN 60335-1:2012+A11:2014+A13:2017  
EN 60335-2-30:2009+A11:2012  
EN 62233:2008

CE (EMC) conformity tested according to: EN 55014-1:2006+A1:2009+A2:2011  
EN 55014-2:1997+A1:2001+A2:2008  
EN 55014-2:2015  
EN 61000-3-2:2014  
EN 61000-3-3:2013

### Correct disposal of this product:



Within the EU, this symbol indicates that this product should not be disposed of with household waste. Waste equipment contains valuable recyclable materials that should be recycled. Furthermore, the environment or human health should not be polluted by uncontrolled waste disposal. Therefore, please dispose of old appliances via suitable collection systems or send the appliance for disposal to the place where you purchased it. They will then recycle the appliance.

I wish you much pleasure with this appliance.

*Your Aktobis AG*

***Keep these instructions for use in a safe place !***