 


DEHUMIDIFIER

WDH-930EEH

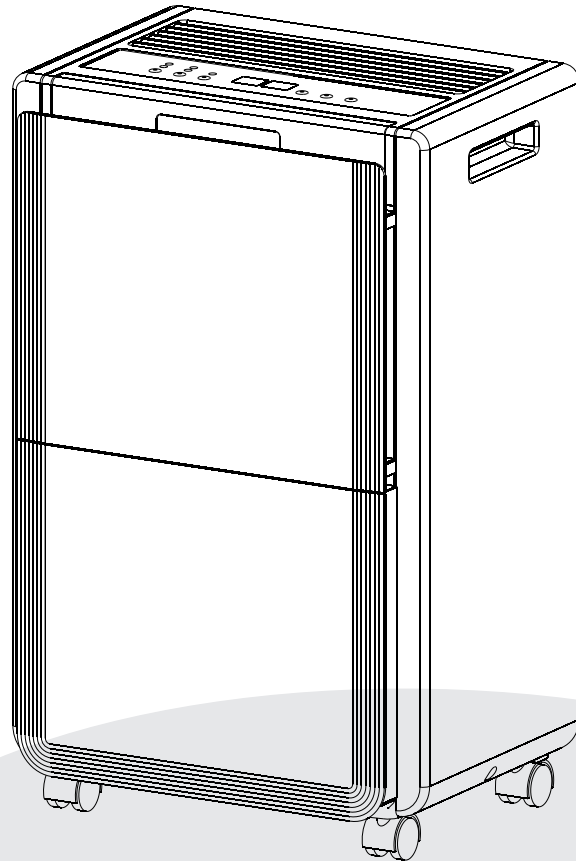

CONTENTS

WARNING / CAUTION	1
DESCRIPTION OF COMPONENTS	
FUNCTION EXPLANATION	2
OPERATION INSTRUCTIONS	3
CONTINUOUS DRAINAGE	4
CAUTIONS	5
MAINTENANCE / EMERGENCY	6
SPECIFICATION	LAST PAGE

 
USER'S MANUAL

VOLTAGE : 220-240V ~ 50Hz


BEFORE USING IT, PLEASE READ THOROUGHLY OF THIS INSTRUCTION MANUAL.

WARNING


- Do not fold the power cord as shown below !

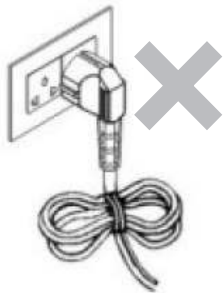

 
- Make sure the plug is placed fully & firm into the socket !

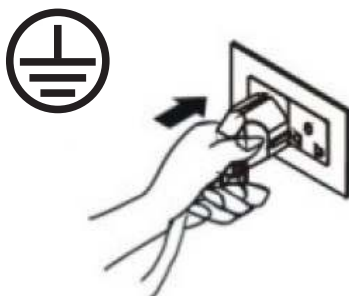

 
- Do not use multiple socket as shown below !

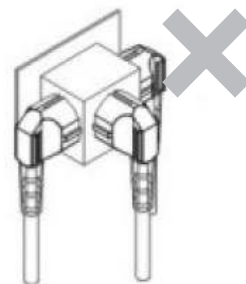


- Make sure the plug is clean !

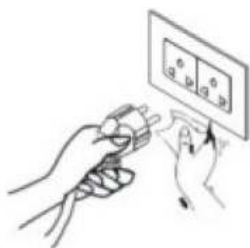 

 - After turning the unit off, please take plug out of the socket.

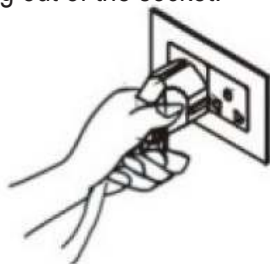

 
- Do not have wet hands when connecting the power plug.

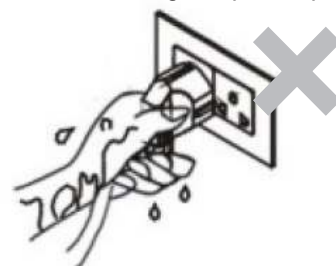


CAUTION: If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

CAUTION

 
- Do not place anything on top of the control panel !

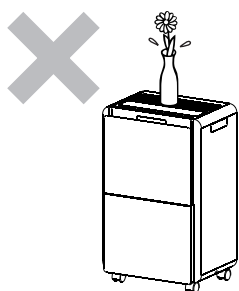

 
- Do not place anything over the inlet or outlet points.

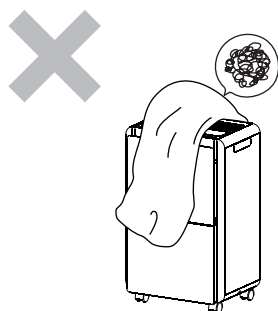

 
- Do not let children play with the unit or control !

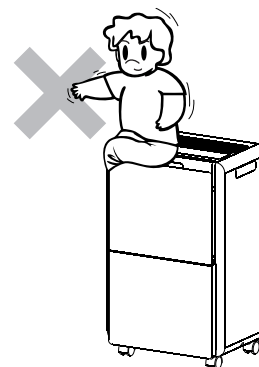

 
- Do not wet the machine or the control panel !

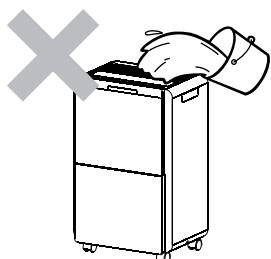

 - Keep the flammable gas/oil away from the machine !

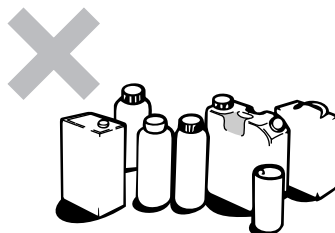

 
- Ask professionals to do the servicing !

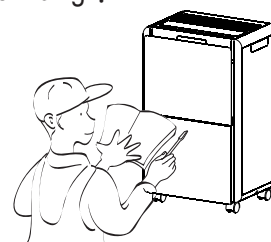


The appliance shall be installed in accordance with national wiring regulations

CAUTIONS

 
- The appliance shall not be installed in the laundry !
- Do not pull the power cord to avoid broken cord, which may lead to danger.

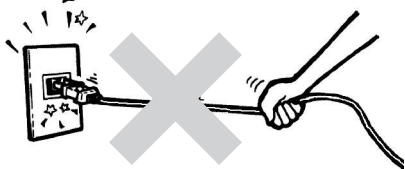

 - Do not place the machine on an uneven ground, to avoid shaking, noise and leakage of water.

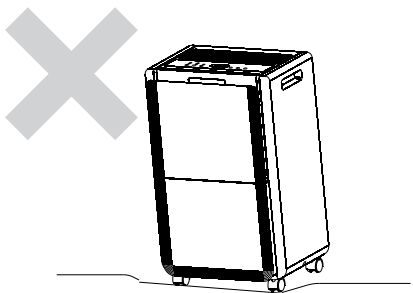


 - It is dangerous to put anything into the machine.

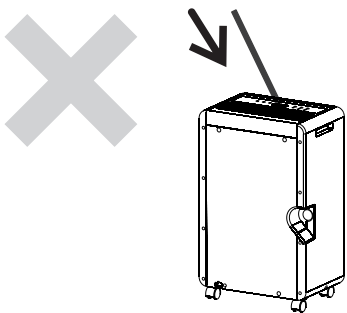


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

 
- Do not use insecticide, oil or paint spray around the machine, it might cause damage to the plastic parts or start a fire.

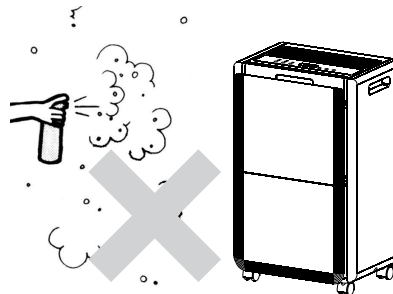

 
- Please always keep the unit 20 cm away from the wall to dissipate the heat properly.

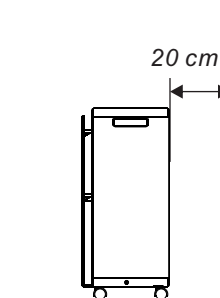

 
- Close all the open windows to reach the maximum possible efficiency of removing moisture.

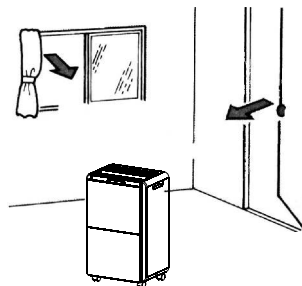

 
- Keep the machine away from any type of heat sources.

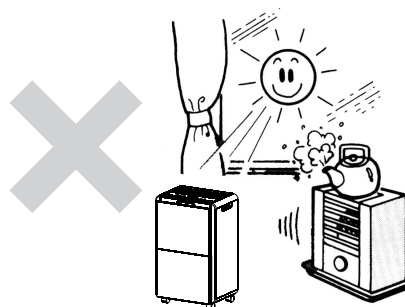

DESCRIPTION OF COMPONENTS

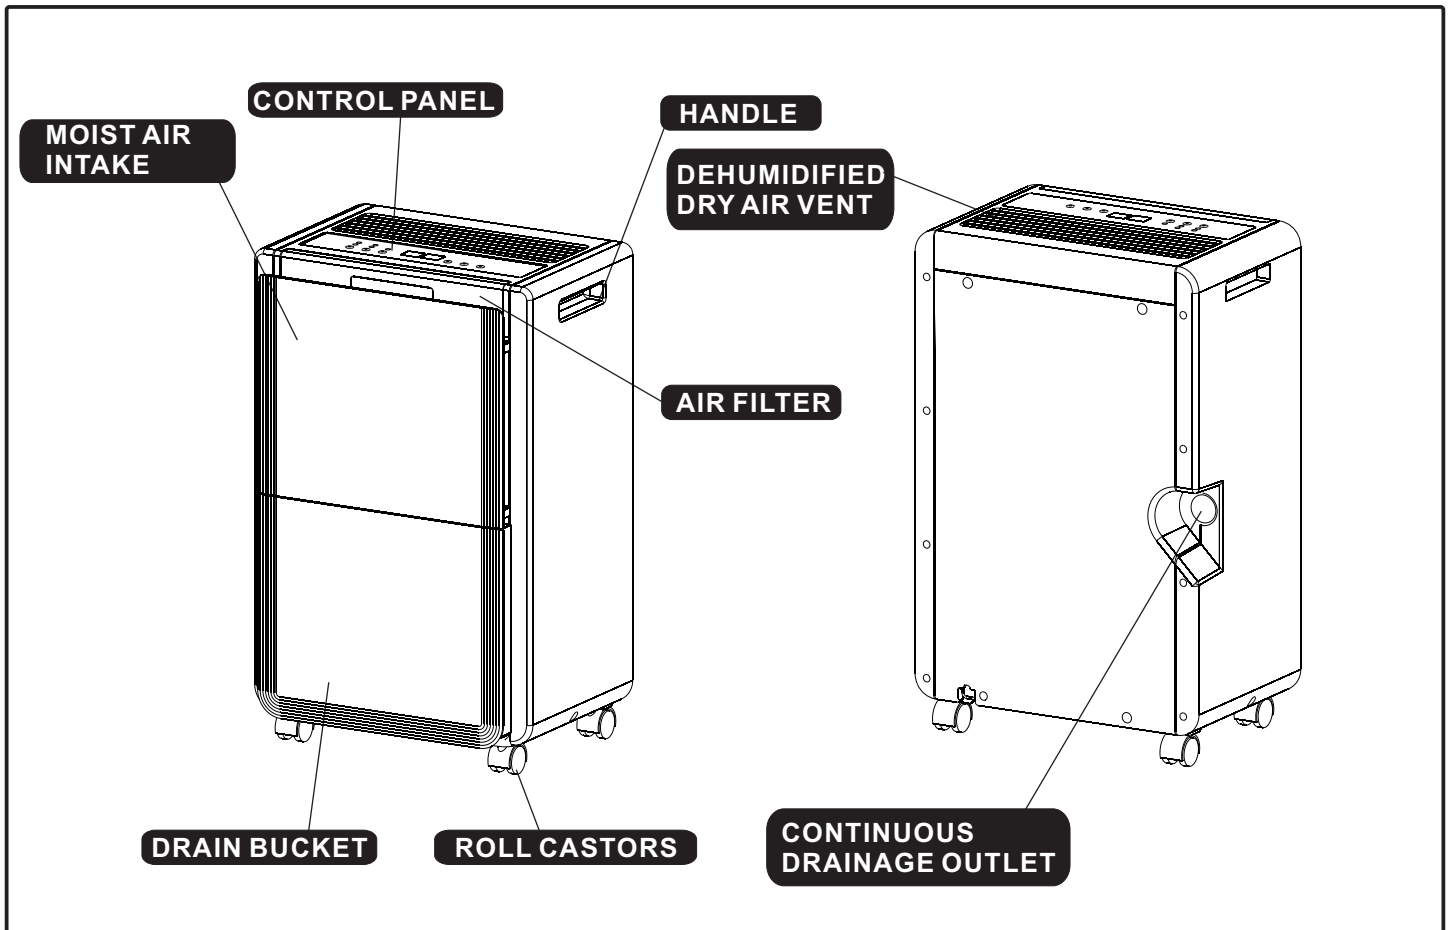 

FUNCTION EXPLANATION


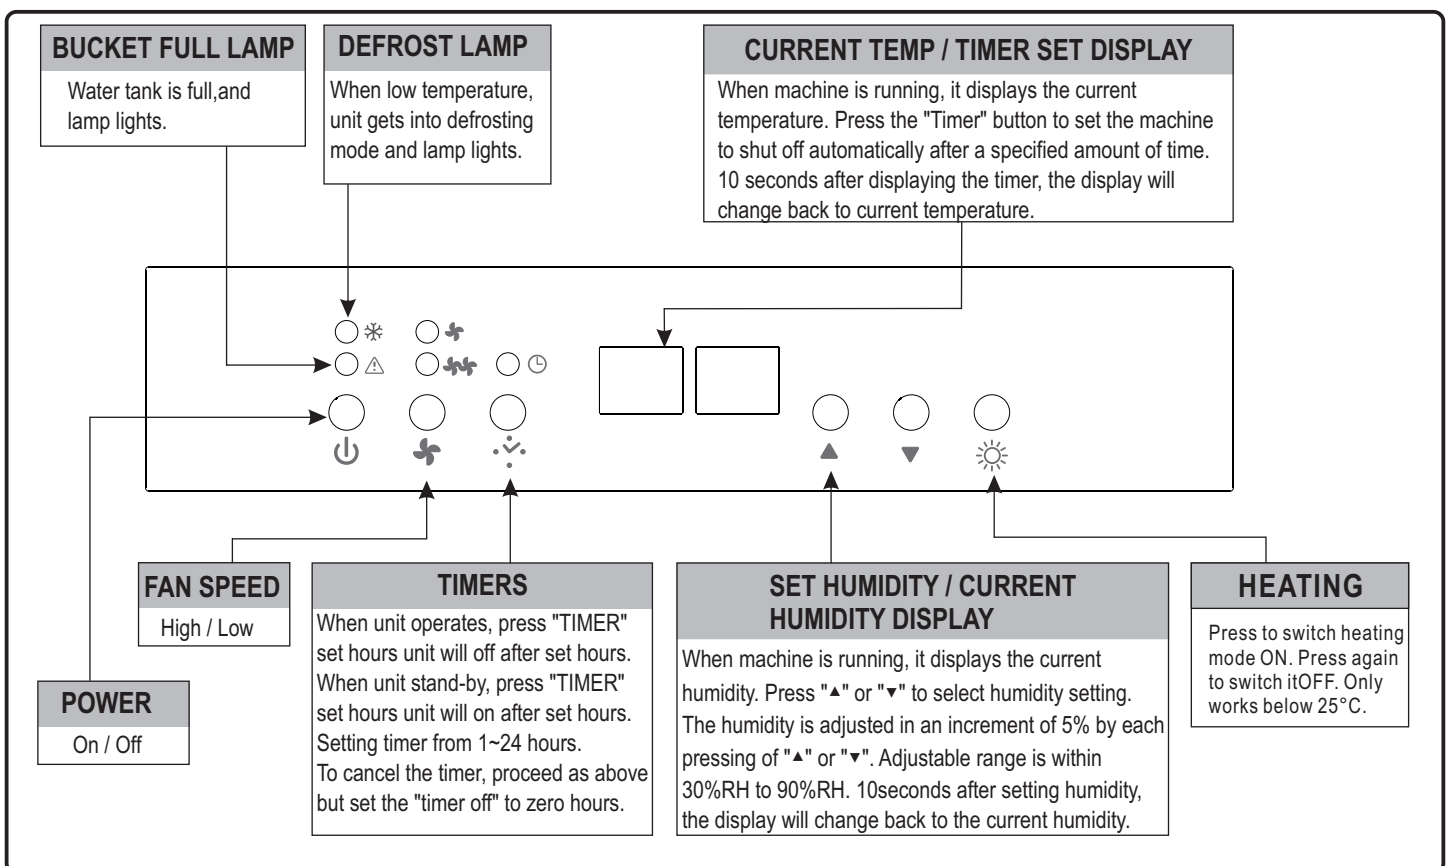 


OPERATING INSTRUCTIONS


● Start Operation

1) Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 100 cm (39 inches). Operating the product in any other position could cause a hazard.

  2) Insert the plug into a suitable wall socket. The dehumidifier is suitable for operation on an electricity supply having the same voltage as that shown on its rating label.

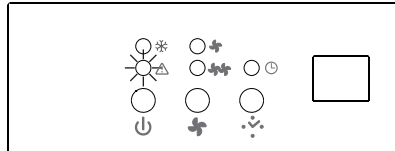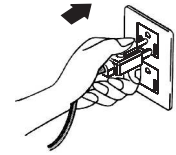


 3) Make sure the water tank is correctly located. (After switching on the machine for the first time, if the "Bucket Full" lamp illuminates, just pull out the water tank, check the "float" lever is able to move freely, then return the water tank to the correct position.)

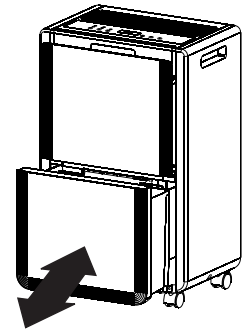

● When Bucket Full Lamp Is On

 
When the water tank is full the machine will stop and the "Bucket Full" light will illuminate. The water tank should be carefully removed from the machine by sliding it outwards from the front of the machine and it should be emptied. When the empty tank is replaced properly into the machine, the machine will start up and run normally.

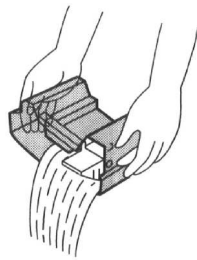

Please use both hands to carefully empty the water tank.







INSTALLATION OF WHEELS

 1. Take the 4 wheels out of the water tank.
2. Lie down the dehumidifier.
3. Follow the arrow direction on dehumidifier and insert the wheels to the 4 corners.
4. Place the unit upright, wait 4 hours before use.

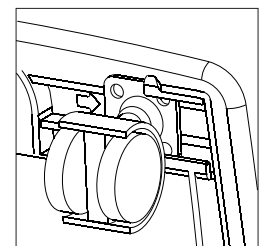



CONTINUOUS DRAINAGE

      The function of continuous drainage can be started in following steps when there is a good condition of drainage near by the unit.
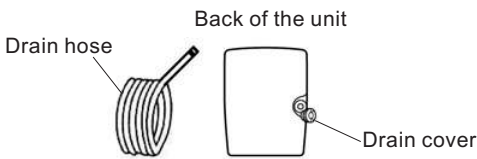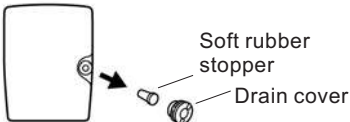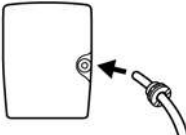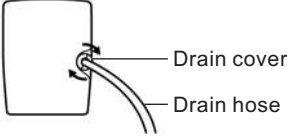
<p>1. To save having to periodically empty the water tank, this unit can be configured for continuous drainage. You can use the supplied drain hose to connect to the continuous drainage connector.</p>	 <p>Back of the unit Drain hose Drain cover</p>
<p>2. Unscrew and remove the drain cover at the rear of the unit. 3. Remove the soft rubber stopper. Put it into the water tank for safe keeping.</p>	 <p>Soft rubber stopper Drain cover</p>
<p>4. Insert the drain hose through the hole of the drain cover.</p>	 <p>Drain cover Drain hose</p>
<p>5. Connect the drain hose to the drain port.</p>	
<p>6. Tighten the drain cover in clockwise direction onto the rear of the unit.</p>	 <p>Drain cover Drain hose</p>
<p>7. Place the bucket on its original location.</p>	 <p>Drain hose Bucket</p>


INSTALLING DRAINAGE PVC HOSE

  When using the continuous drainage, the PVC hose must be placed horizontally below the drainage hole. Must avoid uneven ground and folding the hose.

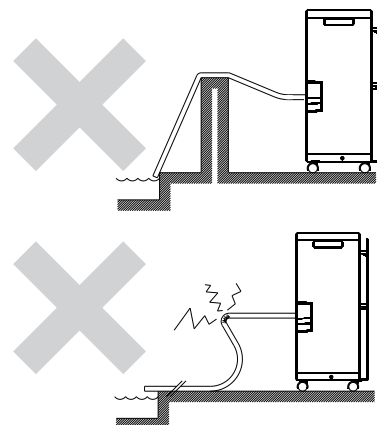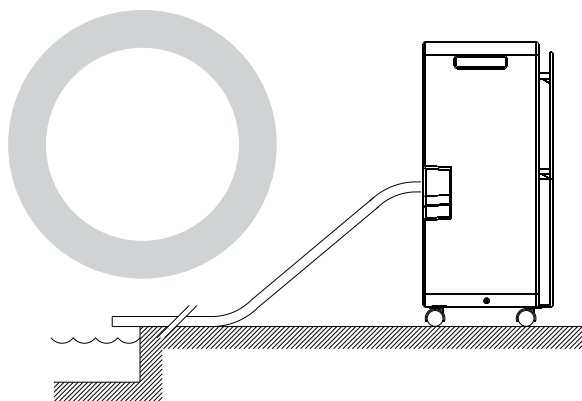

MAINTENANCE

 For safety reasons, make sure the dehumidifier is unplugged before serving or cleaning the machine.

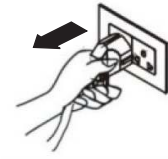

1) Cleaning the shell :

 
- A. Wipe the shell with a clean, soft cloth.
- B. If the dehumidifier is very dirty, use mild detergent then wipe off the detergent with half dried cloth.
- C. Do not wash the machine with a hose or immerse it in water. This may cause leakage of electricity.

2) Cleaning the air filter :


The purpose of the air filter is to filter dust and other materials from the air. For optimal moisture removal efficiency, clean the filter every two weeks.

● Cleaning Steps :

- A. Pull the air filter out gently.

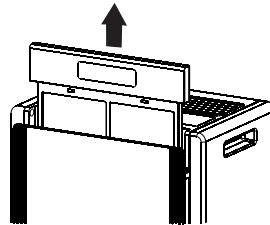

 - B. Clean the filter with a vacuum cleaner or wash it with clean water and dry with a dry cloth.

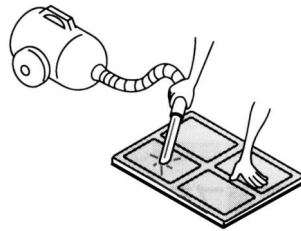

- C. Put the clean air filter back in place and continue to operate the dehumidifier.

EMERGENCY

If a problem occurs, unplug the machine and contact a qualified serving center immediately. Do not disassemble the dehumidifier yourself !

SPECIFICATION

MODEL	WDH-930EEH
POWER	220-240V~50Hz
MOISTURE REMOVAL	35 L/D (30°C 80%RH)
POWER INPUT (Dehumidification Only)	520W
POWER INPUT (Dehumidification & Heating)	1250W
Current Consumption REFRIGERANT	R-410A
SIZE OF SHELL (H×W×D)	545X340X250mm
WEIGHT	14.5 kg
OPERATING TEMPERATURE	5°C ~ 32°C / 5°C ~ 25°C(Heating)
FUSE	3.15A/250V (PC BOARD)
GWP	2088 (R-410A)

- If the power cord on this unit is damaged it must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.